

Turning Off Power Saving Mode


1. Remove SD card from camera and disconnect camera from USB
2. Start camera
3. Press the MENU button




4. Choose Settings Menu



5. Scroll Down and locate «Eco Mode» item. Eco Mode must be set to «Off»

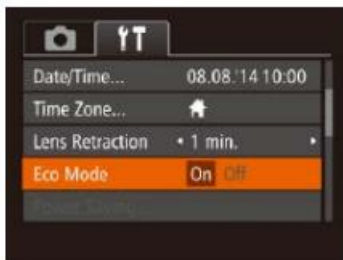

6. Scroll Down to next item «Power Saving», press SET and locate «Auto Power Down» item. Auto Power Down must be set to «Off».

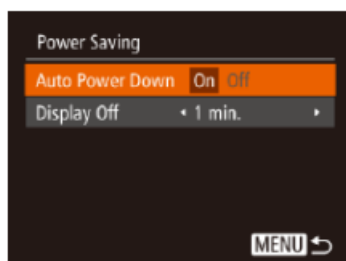

7. Press MENU to return.
8. Turn off camera.
9. Insert SD card back to camera and connect camera to USB.